

BSW-M & BSW-F & BSW-P

Calibration and setting

1. Parameter setting

1-1 Press power switch to start the scale. While it display 1-9, Press the key

 ,  ,  one by one..When it shows 'F1-diu',it means enter into the setting.

1-2 Press the key  or  to select options and parameter.

Press the key  to enter selected option or confirm setting.

Display	Option	Parameter
F1-diu	Division	1 2 5 10 20 50
F2-Fnt	Decimal point	0 0.0 0.00 0.000 0.0000 0.00000
F3-CAP	Capacity	3000 ~ 6000
F4-CAL	Calibration	
F5-tra	Zero-tracking	0.0 0.5 1.0 1.5 2.0 2.5 3.0 3.5 4.0
F6-FLt	Filtration	0 ~ 16
F7-Lit	Backlight switch	Au on off
F8-bud	Baud rate	2400 4800 9600 19200
PRINT MODE		9600
HI-LOW limit mode		2400
F9-ode	Print mode	0 1(Hand) 2(Auto)
PRINT MODE		0
HI-LOW limit mode		1 or 2
Fa-off	Time for automatic off	5 10 15 20 25 30 dis
Fb-ALr	Alarm for hi-low limit	in out off
PRINT MODE		off
HI-LOW limit mode		In or out
Fc-dny	Movement lock	5 10 15 20 25 30 35 40 45
Fd-unt	Unit switch	U1 ON U2 ON U3 ON Def U1 U2 U3

2.Calibration:

When it shows 'F4-CAL', press the key . It will show 'CAL-1', which means enter into calibration setting.

2-1 Press the key  again to show '0.0', then input the value of calibration weight.

2-2 Press the key  again. When it shows 'Put', place the calibration weight on the pan. Press the key  to confirm. It will show 'F4-CAL', which means finish setting.

2-3 Press the key  to exit from the calibration mode.